

# SOHO W1

TRUE WIRELESS STEREO BLUETOOTH EARBUDS

www.sohosoundcompany.com

## VOICE NOTES

WHAT YOU WOULD EXPECT	THE SOHO SOUND
<b>POWER ON</b>	THIS IS THE SOUND OF SOHO
<b>PAIRING</b>	TESTING, TESTING 1, 2
<b>CONNECTED</b>	SOUND CHECK COMPLETE
<b>DISCONNECTED</b>	THAT'S A WRAP
<b>LOW BATTERY PLEASE CHARGE</b>	LOW ON JUICE PLEASE CHARGE
<b>POWER OFF</b>	THANK YOU AND GOODNIGHT

### SOHO SOUND COMPANY WARRANTY

1. The device is guaranteed for 12 months from the date of purchase. Repair and maintenance service are free during period.

2. The warranty limitation:

- Man-made damage;
- Beyond the Warranty period;
- Accessories damage due to improper use and maintenance;
- Disassemble the device without manufacturer authority;

3. Service Information  
Soho Sound Company Website:  
www.sohosoundcompany.com

### TRADEMARKS

"SOHO SOUND COMPANY" word mark and logos are registered Trademarks of SOHO SOUND SYSTEMS LIMITED.

Reproduction in whole or in part without written permission is prohibited. Other companies and products mentioned herein are trademarks of their respective owners.

Imagined in London - Made in China

### CUSTOMERS

This device has been manufactured by or on behalf of SOHO SOUND SYSTEMS LIMITED. This device is in compliance with Directive 2014/53/EU.

This symbol on the device, the battery or on the packaging indicates that the device and the battery shall not be treated as household waste. By ensuring these devices and batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and ease of devices that for safety, performance or data integrity reasons Require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery and the electrical and electronic device will be treated properly, hand over these devices at end-of-life to the applicable collection point for the recycling of electrical and electronic device. Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this device or battery, please contact your local Civic Office, your household waste disposal service or the dealer. This symbol is only valid in the European Union.

## SOUNDS GOOD

www.sohosoundcompany.com

©2021 Soho Sound System Limited. Trading as Soho Sound Company Limited.

## INSTRUCTIONS

# SOHO W1

TRUE WIRELESS STEREO BLUETOOTH EARBUDS

www.sohosoundcompany.com

### WHAT DID I GET?

W1 EARBUDS

R L

CHARGING CASE

INSTRUCTIONS

HERE'S A TIP FOR YOU

All sizes foam & rubber

USB FAST CHARGING CABLE TYPE C

### SPECIFICATION

Bluetooth Version : V5.0  
Support Profile : HFP/HSP/A2DP/AVRCP  
Bluetooth distance : 10M  
Talking time : 7H  
Playing time : 7H  
Earbuds battery : 70MAH  
Charging case battery/power bank : 3000MAH  
Earbuds charging time : 1H  
Charging case charging time : 4H  
Support system : IOS/Android/Windows  
Packing list : EARBUDS\*1 Pair/Charging case\*1/PC Tips \*3 Pairs of foam and 3 pairs of rubber/Thunderbolts and lightning Charging Cable \* 1PC

### LET'S GET GOING

1. We supply L/M/S three types of EARBUD-tips (Pic. A), please make sure you find the best fit for you so don't get them stuck in your ear.

We also provide 3 foam EARBUD-tips because we believe they give greater comfort combined with acoustic properties. Once you have attached them to your EARBUD you have to pinch these with your thumb and index finger to squash them. Then insert them in your ear and the memory foam will expand within your ear.

2. The charging case printed "L" and "R", please wear the earbud located in the "L" for left ear, "R" for right ear. I know it sounds obvious but we have to include it.

Listen up! Your left and right ears might require a different size of tip, please choose the best suitable one separately and turn to the location (Pic. B)

### OPERATION INSTRUCTIONS

#### POWER ON - THIS IS THE SOUND OF SOHO

The two EARBUDS will turn on automatically after taking them out from the case. Please remove the protection film for first use, then put the EARBUDS in the case and take them out again. Touch the two EARBUDS for 3 seconds to power on if using without the charging case or the charging case is without power.

#### BLUETOOTH PAIRING - TESTING TESTING 1, 2

The two EARBUDS will turn on and pair automatically after taking them out of the charging case (if the pairing is not disrupted). The master-EARBUD (right) indicator will flash red and green whilst waiting to connect to Bluetooth. The sub-EARBUD (left) will flash green every 5 seconds. On your device, turn on the mobile Bluetooth to search and connect to the "SOHO W1".

#### POWER OFF - THANK YOU AND GOOD NIGHT ( TWO METHODS )

1. Earbuds will be power off automatically after put into the charging case.  
2. The earbuds will be power off automatically 5 minutes after disconnecting the Bluetooth connection after .

#### W1 EARBUD TOUCH PAD OPERATION

**Music control :** Long touch left earbud 2 seconds for last track, long touch the right 2 seconds or next track. Single click either EARBUD for pause/play. Volume control: Double click the left earbud to decrease, double click the right to increase volume.  
**Answer calls:** Single click for answering, touch either earbud 2 seconds hanging up when in calling.  
**Call-reject:** Long touch either of the EARBUDS for 2 seconds.  
**Voice assistant control:** APPLE = Quick three clicks of either of earbuds to activate "SIRI". Android products will depend on what music playback app you are using, for example amazon music will work with voice commands.  
**Single EARBUD operation:** Remove the right or left earbud from the charging case. Wait for several seconds until you see a red and green alternating flash on the indicator light. On your Audio playback device, turn on mobile Bluetooth to search and connect the "Soho W1". Both of two earbuds have call function separately.  
**Ongoing use of EARBUDS :** Remove the two earbuds from charging case, they will be paired and connect the last connected Bluetooth device automatically.

### EARBUDS AND CHARGING CASE INDICATORS EXPLAINED

A. Flashing green light: slowly, no connection.  
B. Flashing green light once every 5 seconds, connected.  
C. Flashing red light once every 60 seconds, low battery warning.  
D. Indicator light turns off after full charge complete.

#### EARBUDS CHARGING

- Put the earbuds into the charging case ;
- Earbuds indicator light is red when in charging;
- Earbuds indicator light turns off after full charging.

#### CHARGING CASE CHARGING

- Please charge for the case with DCSV/1A, such as computer USB or Other USB interface charger (ONLY approved Charger) ;
- In charging, one green light means 0-25% battery, two green lights means 26-50% battery, three green lights means 51-75% battery, four green lights means 76-100%;
- After a full charge, the four green lights are keep lighting. Please disconnect the charging device.

#### FACTORY RESET (PAIR LEFT AND RIGHT EARBUDS AGAIN)

When the earbuds is charging in the charging case (red indicators), long touch two earbuds over 8 seconds to reset, two earbuds flash red light 3 times quickly. Then take out the two earbuds at the same time, they will be power on and paired automatically. At last, turn on the mobile Bluetooth to search and connect the earbuds Bluetooth name.

#### ATTENTION

- Do not open and refill the earbuds in any reason, in case of damages and burning. The manufacturer do not supply warranty if that.
- Do not touch corrosive liquid with the equipment, in case of seriously damages. The manufacturer do not supply warranty if that.
- Do not put the earbuds in temperature below -45 degree or above 75 degrees.

#### WARNING!

This product contains built-in lithium battery, do not expose under strong sunlight and throw into fire in case of explosion. Deal with batteries in accordance with local regulations, do not treat as household waste. The user can not remove or replace the battery, which is dangerous and may damage the product.

Some questions we get asked.	Answers (get in touch if you're having issues)
Charging case will not charge?	Please check the cable is plugged in tightly, and please try a new charging cable.
EARBUDS can not charge?	Please check if the charging case has power. Clean the charging contacts.
EARBUDS do not power on?	Check if the EARBUDS have power or not, try charging them again if this does not work let us know.
Why does my mobile device show two Bluetooth names of "SOHO W1" ?	Cancel the two "SOHO W1" on your device, power off the EARBUDS and power on to search again.
How long of the interconnection distance between the left and right EARBUD?	Within 3 meters without any obstruction.

FOR BETTER MUSIC EXPERIENCE, SUGGEST TO USE IOS & ANDROID 4.3 OR ABOVE OPERATION SYSTEM.

### ATTENTION!

To ensure the earbuds have a longer standby time, we stick protection film on the earbuds charging contacts. For first use, please remove the protection film first, then put the two EARBUDS into the charging case, take out the two EARBUDS again and the EARBUDS will power on and pair automatically.

©2021 Soho Sound System Limited. Trading as Soho Sound Company Limited.